2.Exploded Views and Parts List

2-1 Total Exploded View

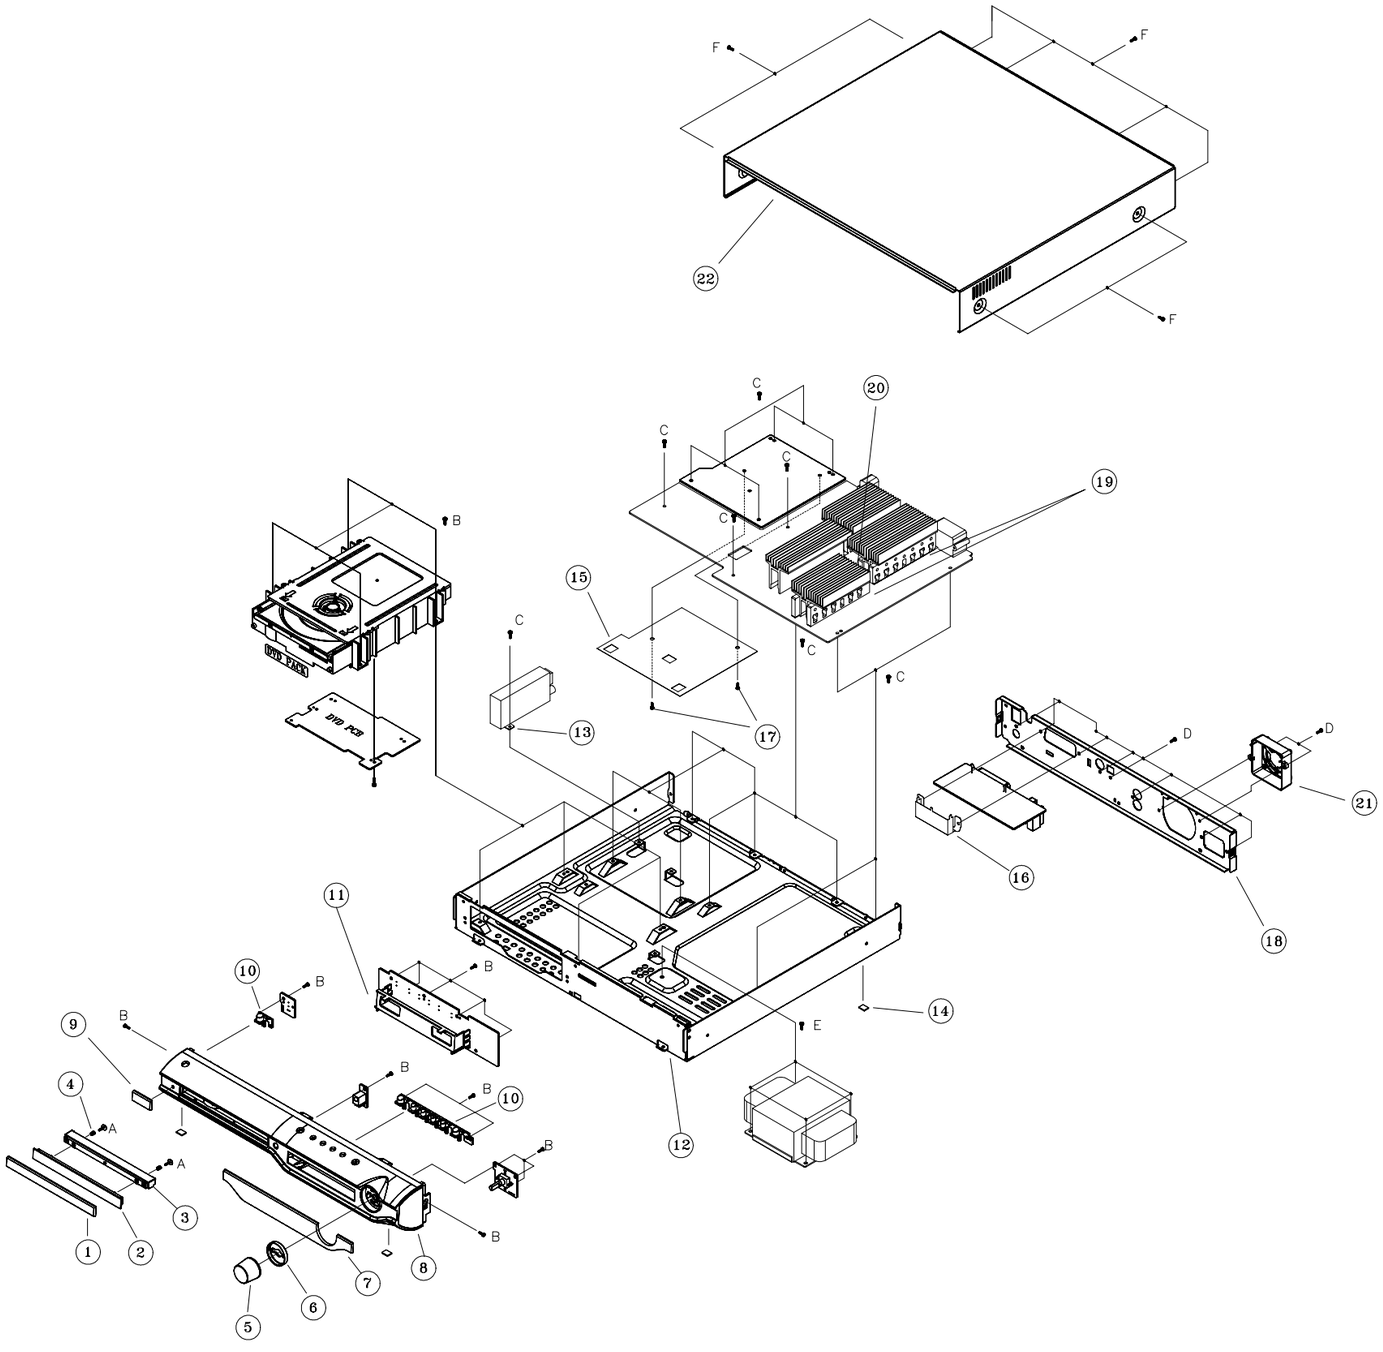

*** Parts List of Total Exploded view**

No.	Code No.	Description	Specification	Q'ty	REMARK
1	AH64-02819B	WINDOW-CD	PMMA 3.0T	1	
2	AH64-02814B	DOOR-CD	ABS BLACK	1	
3	AH61-01404A	HOLDER-DOOR	ABS D/GRAY	1	
4	AH61-01404A	SPRING-DOOR	SUS304	2	
5	AH64-02815A	KNOB-VOLUME	ABS L/GRY	1	
6	AH67-00262A	LENS-VOLUME	PMMA MILKY	1	
7	AH64-02820C	WINDOW-VFD	PMMA 3.0T	1	
8	AH64-02813C	CABINET-FRONT	HIPS L/GRY	1	HT-DS100(EUR)
	AH64-02813D			1	HT-DS100(CANADA)
	AH64-02813E			1	HT-DS100(NO EUR)
	AH64-02813F			1	HT-DS110(EUR)
	AH64-02813G			1	HT-DS140(NO EUR)
	AH64-02813H			1	HT-DS100B(EUR)
	AH64-02813J			1	HT-DS100B(NO EUR)
	AH64-02813K			1	HT-DS100(USA)
	AH64-02813L			1	HT-DS140(USA)
	AH64-02813M			1	HT-DS140(AUSTRALIA)
9	AH64-02818C	WINDOW-POWER	PMMA 3.0T	1	
10	AH64-02816A	KNOB-FUNCTION	ABS L/GRY	1	
11	AH61-01405A	HOLDER-VFD	ABS BLK	1	
12	AH64-02821A	CABINET-BOTTOM	SECC 1.0T	1	
13	AH61-01355A	BRKT-TUNER	SECC 1.0T	1	
14	AH73-00005A	RUBBER-FOOT	EVA 11.5*9	4	
15	AH63-00090K	COVER-PCB	PC 0.4T	1	
16	AH63-00386A	SHIELD-SCART	SPTE 0.3T	1	
17	AH61-40014A	SUPPORT-RIVET	PP	2	
18	AH64-02817C	CABINET-REAR	SECC 0.6T	1	EUR
	AH64-02817D		SECC 0.6T	1	USA
	AH64-02817E		SECC 0.6T	1	NO ASIA
	AH64-02817F		SECC 0.6T	1	HT-DS110(DIXON)

No.	Code No.	Description	Specification	Q'ty	REMARK
19	AH61-00779A	HOLDER-IC	PBT	5	
20	AH61-00855A	HOLDER-IC	PBT	1	
21	AH63-00517A	COVER-FAN	ABS GRY	1	
22	AH64-02315B	CABINET-TOP	SECC 0.6T	1	
A	6003-001496	TAPTITE SCREW	WASHER 6.8 M2.5		
B	6003-000276	TAPTITE SCREW	BH 3 * 10 YEL		
C	6002-000398	TAPTITE SCREW	BH 3 * 6 YEL		
D	6003-000275	TAPTITE SCREW	BH 3 * 10 BLK		
E	6003-001462	TAPTITE SCREW	TH 4* 6 YEL		
F	6003-001499	TAPTITE SCREW	BWH 3 * 10 SILVER		

2-2 DVD MECHA Exploded View and Parts list

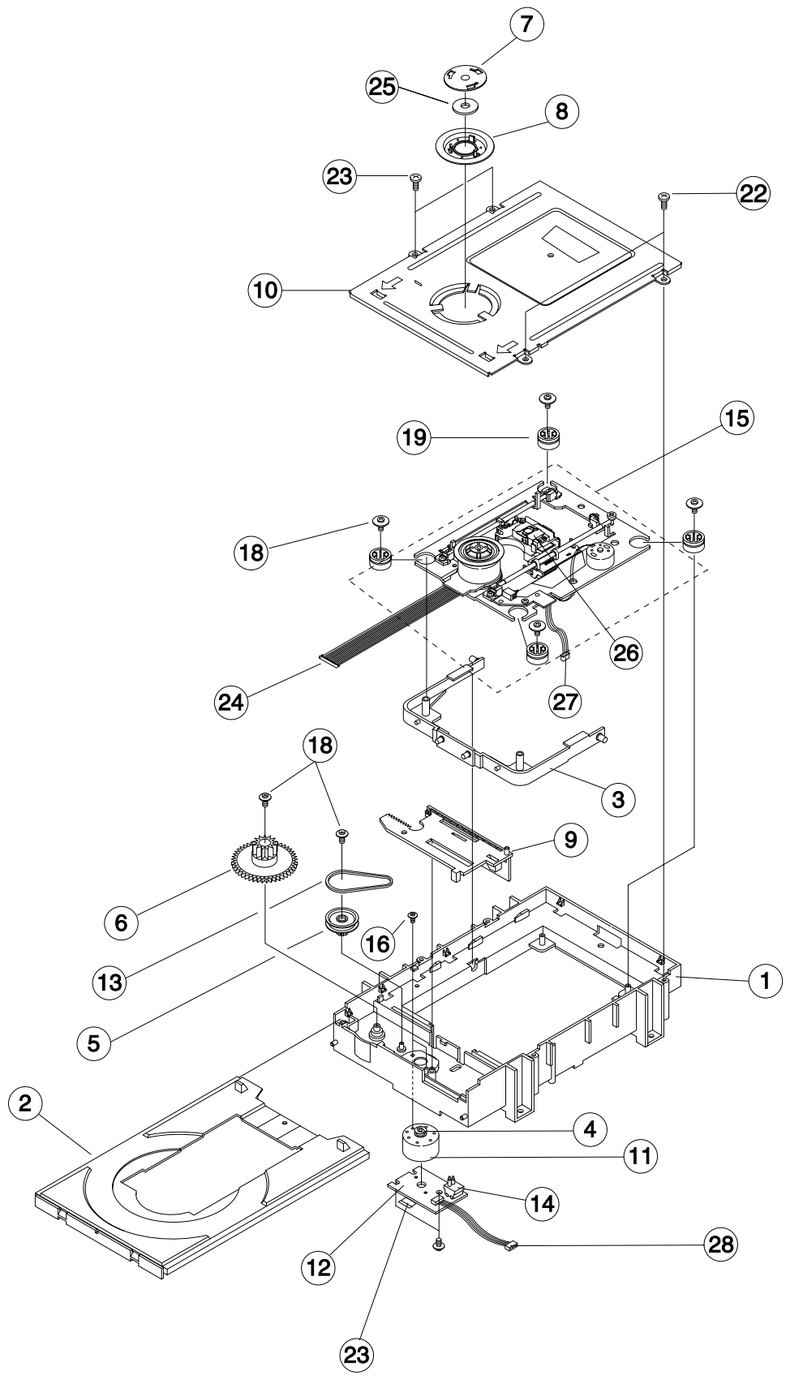

No.	Code No.	Description ;	Specification
1	AH61-01293A	BASE-MAIN	ABS BLK
2	AH63-00535A	TRAY-DISC	ABS D/GRAY
3	AH66-00214A	LEVER-LIFT	ABS+GF20%
4	AH66-00215A	PULLEY-MOTOR	POM WHT
5	AH66-00216A	GEAR-PULLEY	TPE WHT
6	AH66-00217A	GEAR-TRAY	POM WHT
7	AH61-01295A	CLAMPER-BRKT	SECC t0.8
8	AH63-00536A	CLAMPER-MOLD	POM WHT
9	AH66-00218A	SLIDE-CAM	PC WHT
10	AH61-01296A	HOLDER-BRACKET	SECC t0.8
11	AH31-00030B	MOTOR-DC	RF-300E-1D390
12	AH41-00560A	PCB-SWITCH	43.5 * 32.5
13	AH66-00219A	BELT-PULLEY	CR 1.2
14	3409-001119	SWITCH-DETECTOR	JDS2200
15	AH59-01184A	DVD-DECK ASSY	CMS-S51PG4
16	6001-001257	SCREW-MACHINE	1.7*3(W4.5)
17	AJ60-10001A	SCREW-TAP	WASHER 6.8
18	6003-000152	SCREW-TAP	2*10.12
19	AH73-00058A	RUBBER-CD	SILICON 30
20	0205-001106	GREASE	GX-99004
21	0205-001109	GREASE	DM-523
22	6003-000283	SCREW	TAP 3*8
23	AH02-00038A	TAPE	10mm*80mm
24	3809-001451	CABLE-FLAT	60mm 24P
25	3302-001505	MAGNET CHUCK	190 gf
26	AH30-00055A	PICK-UP	4P.JST
27	AH39-00495A	WIRE-HARNESS	UL1007,#28,70mm
28	AH39-00496A	WIRE-HARNESS	UL1007,#28,65mm

**** Caution:** The MECHA does not include the DECK ASS'Y.*
The DECK ASS'Y must be ordered separately when repairing.

2-3 SPEAKER Composite View

2-3-1 HT-DS100/ DS110

* CAUTION : The NET FRAME(or FRONT PANEL ASS'Y) uses bonding to connect to CABINET ASS'Y.
The extreme care not to damage the SPEAKER during disassembly.

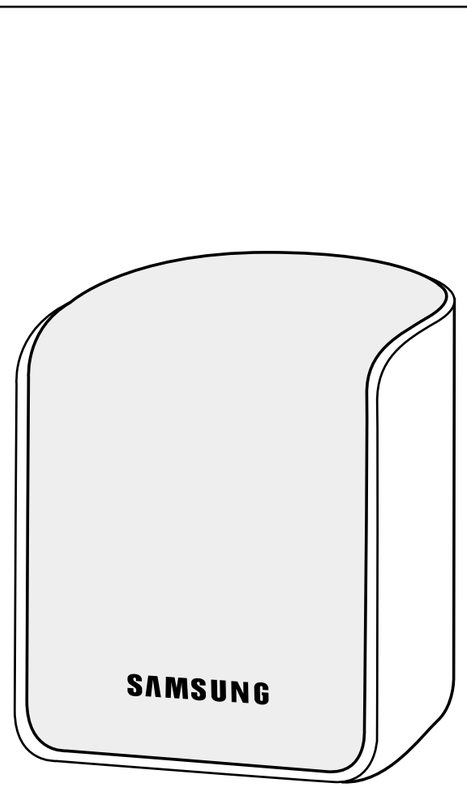

Front Speaker (PSFS100E) : AH81-01434B
Center Speaker (PSCS100E) : AH81-01434C
Rear Speaker (PSRS100E) : AH81-01434D

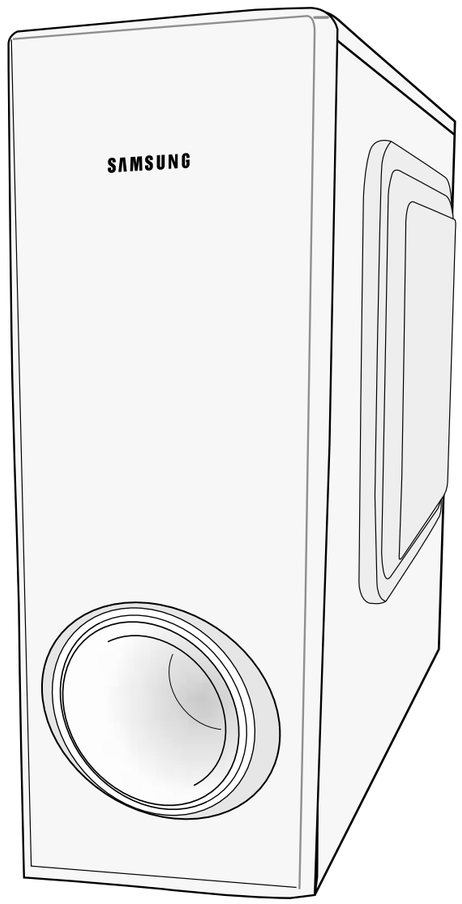

SUBWOOFER (PSWS100E) : AH81-01434E

2-3-2 HT-DS100B

* CAUTION : The NET FRAME(or FRONT PANEL ASS'Y) uses bonding to connect to CABINET ASS'Y.
The extreme care not to damage the SPEAKER during disassembly.

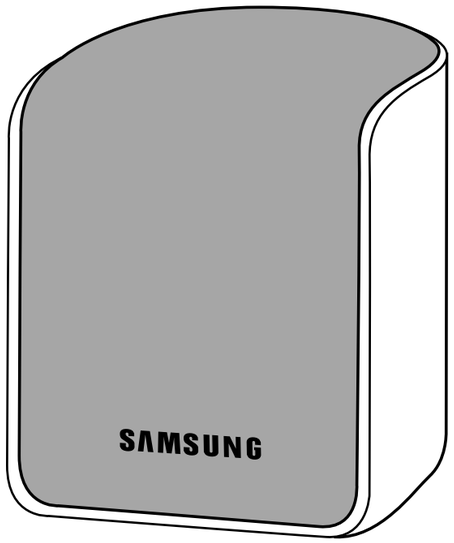

Front Speaker (PSFS100BE) : AH81-01532B
Center Speaker (PSCS100BE) : AH81-01532D
Rear Speaker (PSRS100BE) : AH81-01532C

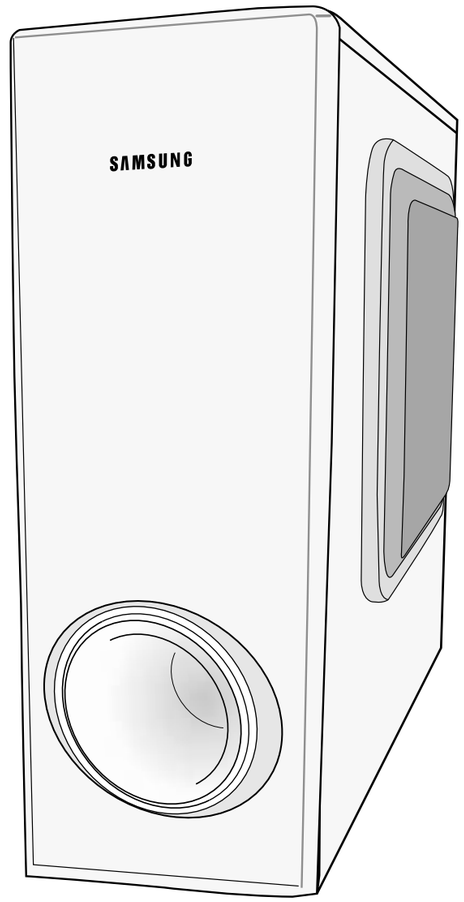

SUBWOOFER : AH81-01532E
(PSWS100BE)

2-3-3 HT-DS140

* CAUTION : The NET FRAME(or FRONT PANEL ASS'Y) uses bonding to connect to CABINET ASS'Y.
The extreme care not to damage the SPEAKER during disassembly.

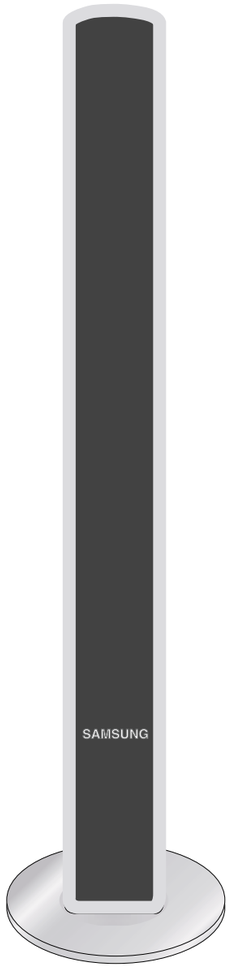

Front Speaker : AH81-01536B
(PSFS140E)

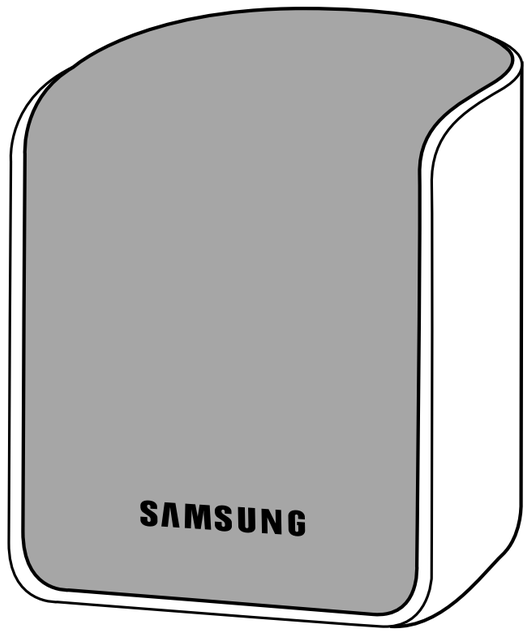

Center Speaker : AH81-01532D
(PSCS100BE)

Rear Speaker : AH81-01532C
(PSRS100BE)

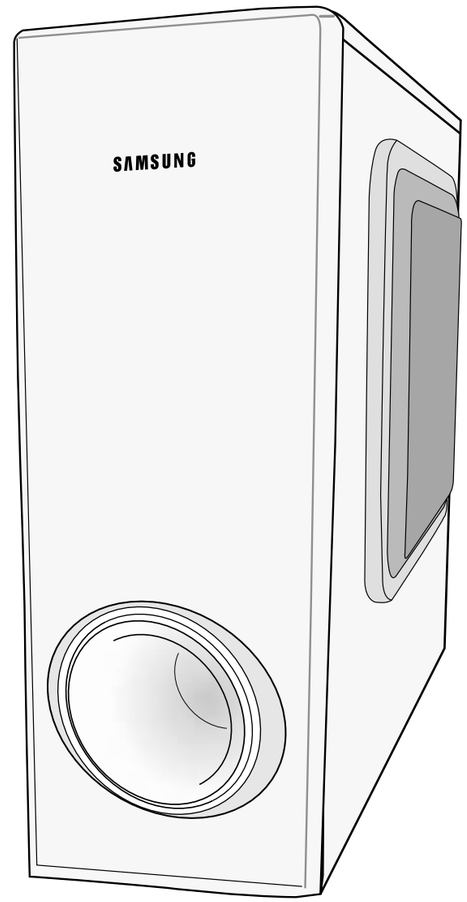

SUBWOOFER : AH81-01532E
(PSWS100BE)